


For 1-3/4" thick door, fold here and attach to the door at desired height of ASA Strike location. Mark the positions of holes for Face and Edge bores. For other door thickness, mark the holes on door Face side and draw a light line between 2 locators H1/H2. Center the Edge Template on door Edge for marks, using the 'Horizontal Center Line' and H1/H2 line drawn as reference for the Height. If mortise for Strike has already been made in metal frame, position template using strike mortise as reference.

Installation Template
For Series A600, A700,
Electricied Mortise Lock +
AZ-X324 Mounting Bracket

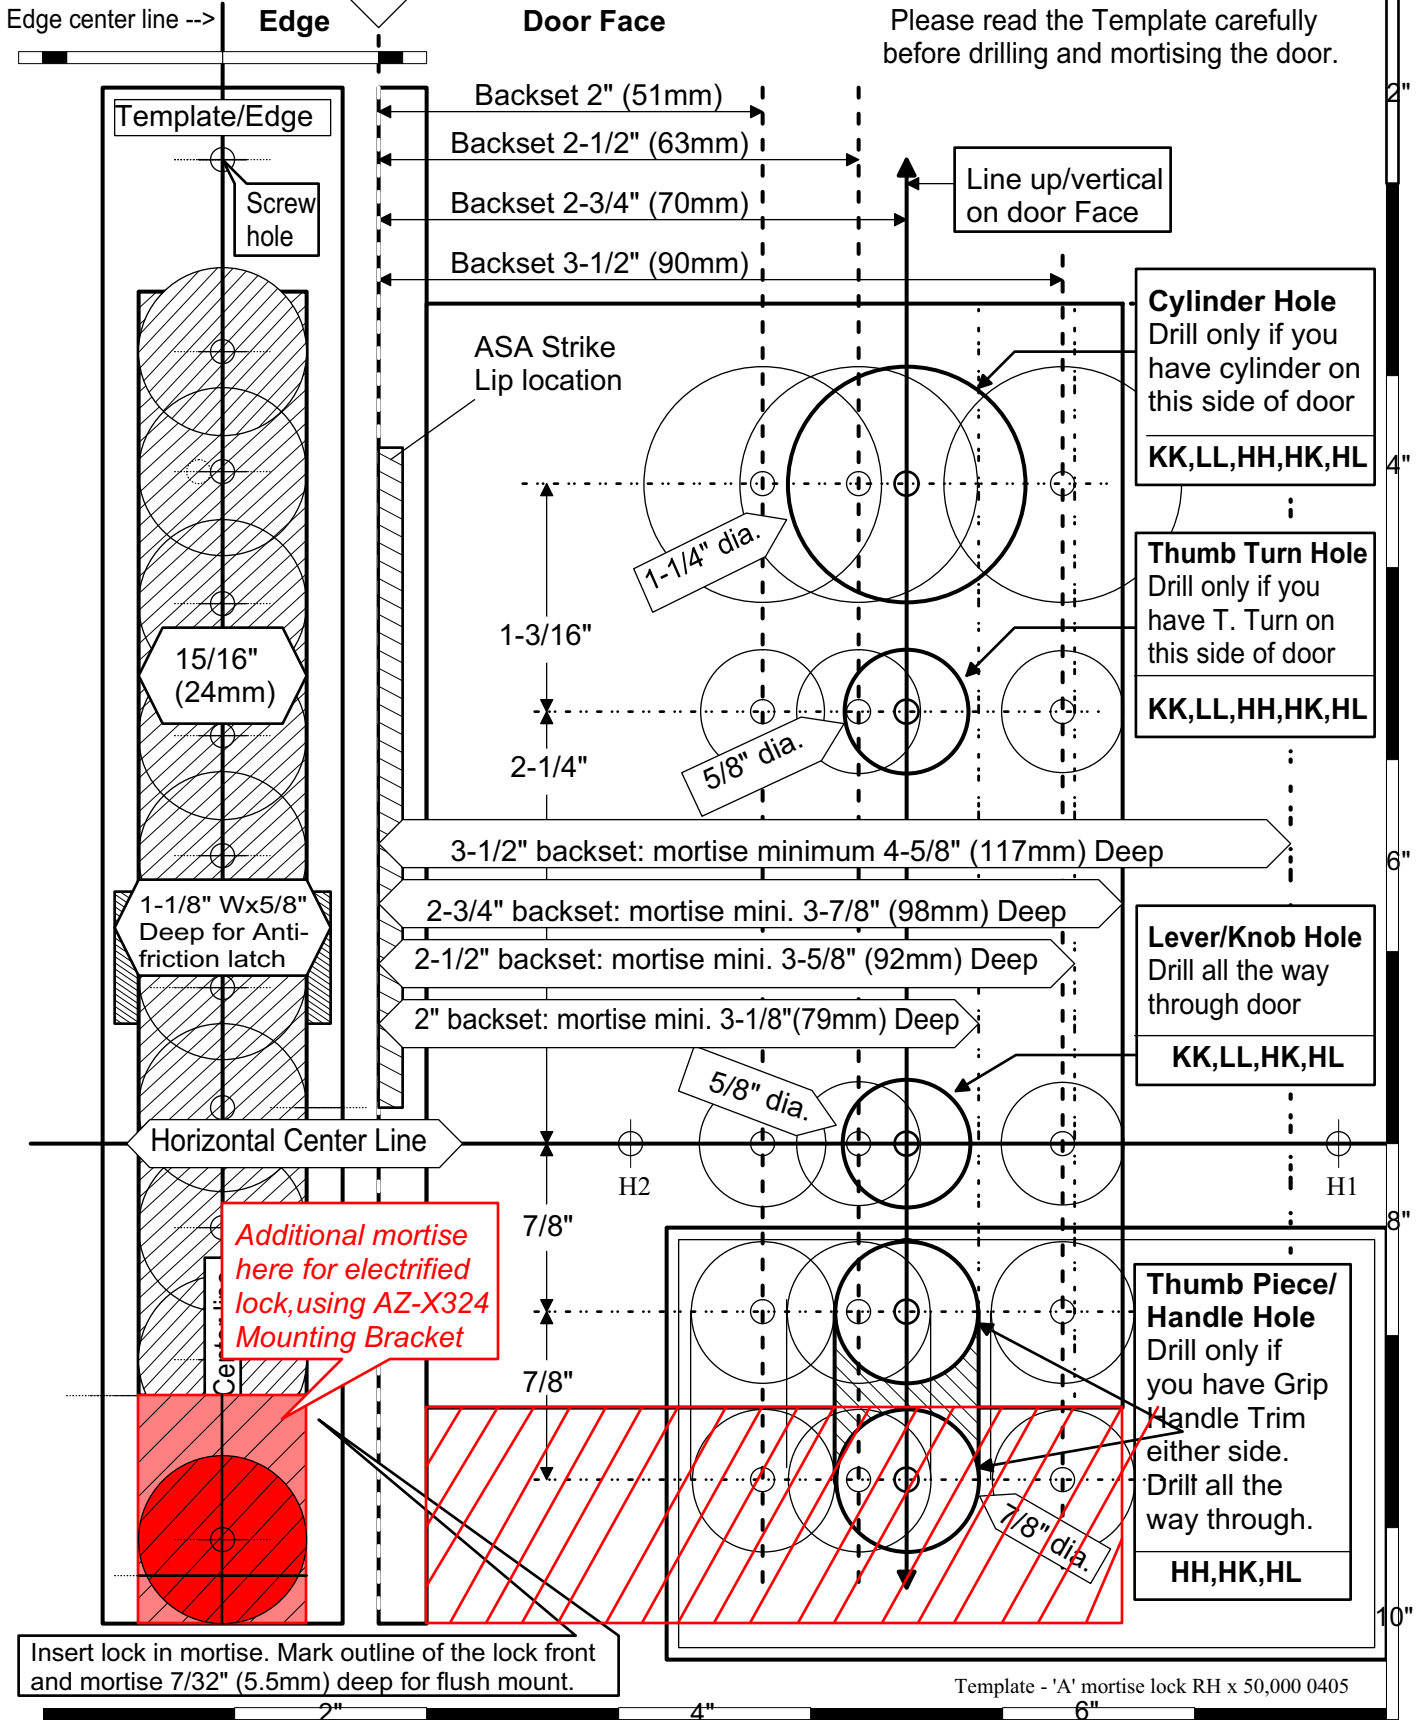


Please read the Template carefully before drilling and mortising the door.

Installation Template
For Series A600, A700,
Electricied Mortise Lock +
AZ-X324 Mounting Bracket

For 1-3/4" thick door, fold here and attach to the door at desired height of ASA Strike location. Mark the positions of holes for Face and Edge bores. For other door thickness, mark the holes on door Face side and draw a light line between 2 locators H1/H2. Center the Edge Template on door Edge for marks, using the 'Horizontal Center Line' and H1/H2 line drawn as reference for the Height. If mortise for Strike has already been made in metal frame, position template using strike mortise as reference.

Please read the Template carefully before drilling and mortising the door.

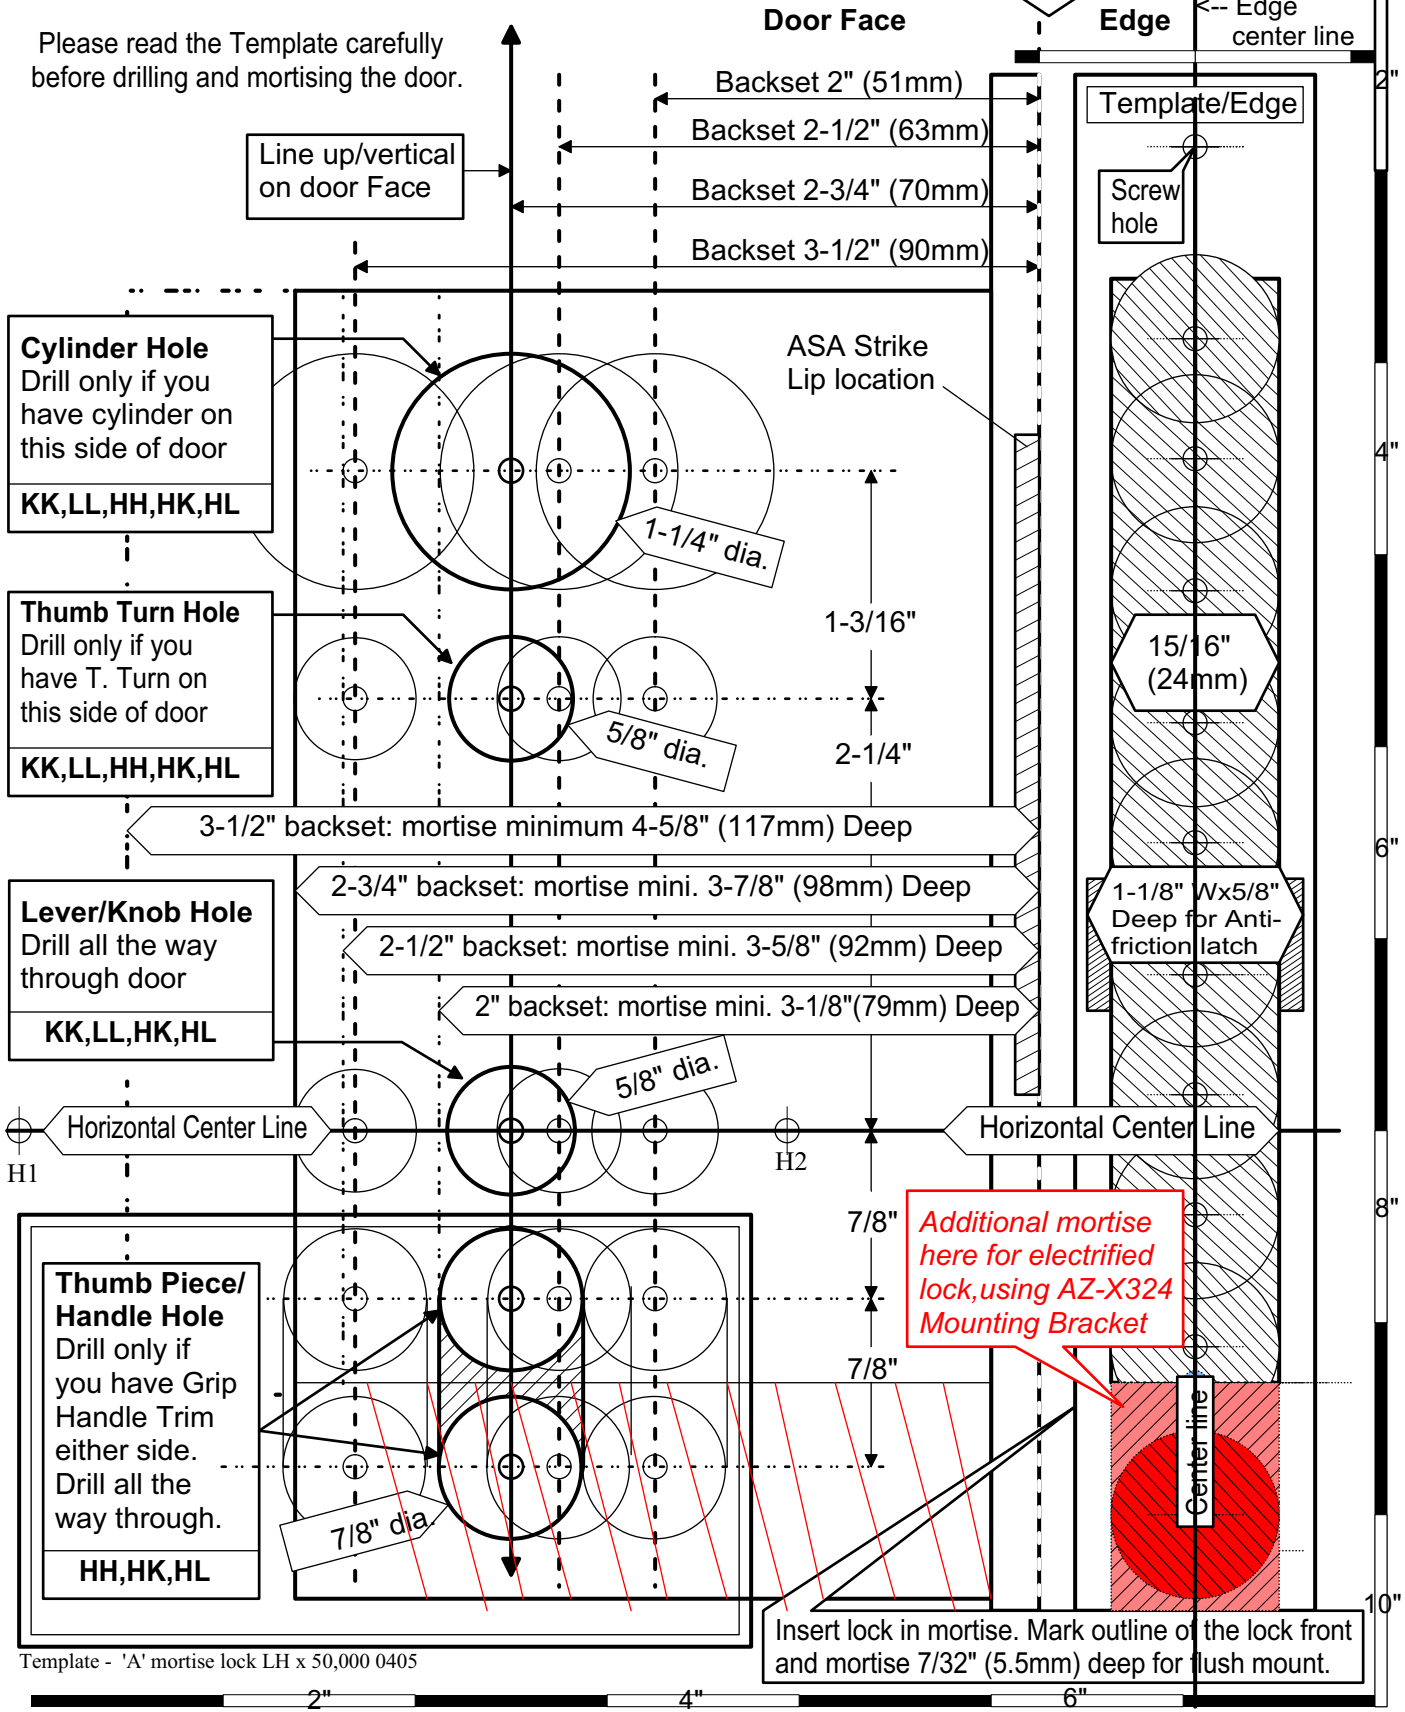

Template - 'A' mortise lock LH x 50,000 0405

Additional mortise here for electricied lock, using AZ-X324 Mounting Bracket

Insert lock in mortise. Mark outline of the lock front and mortise 7/32" (5.5mm) deep for flush mount.