


Template for A578 Pocket lock case

For 1-3/4" thick door, fold here and attach to the door at desired height of Strike location. Mark the positions of holes for Face and Edge bores. For other door thickness, mark the holes on door Face side and draw a light line between 2 locators H1/H2. Center the Edge Template on door Edge for marks, using the 'Horizontal Center Line L' and H1/H2 line drawn as reference for the Height. If mortise for Strike has already been made in metal frame, position template using strike mortise as reference.

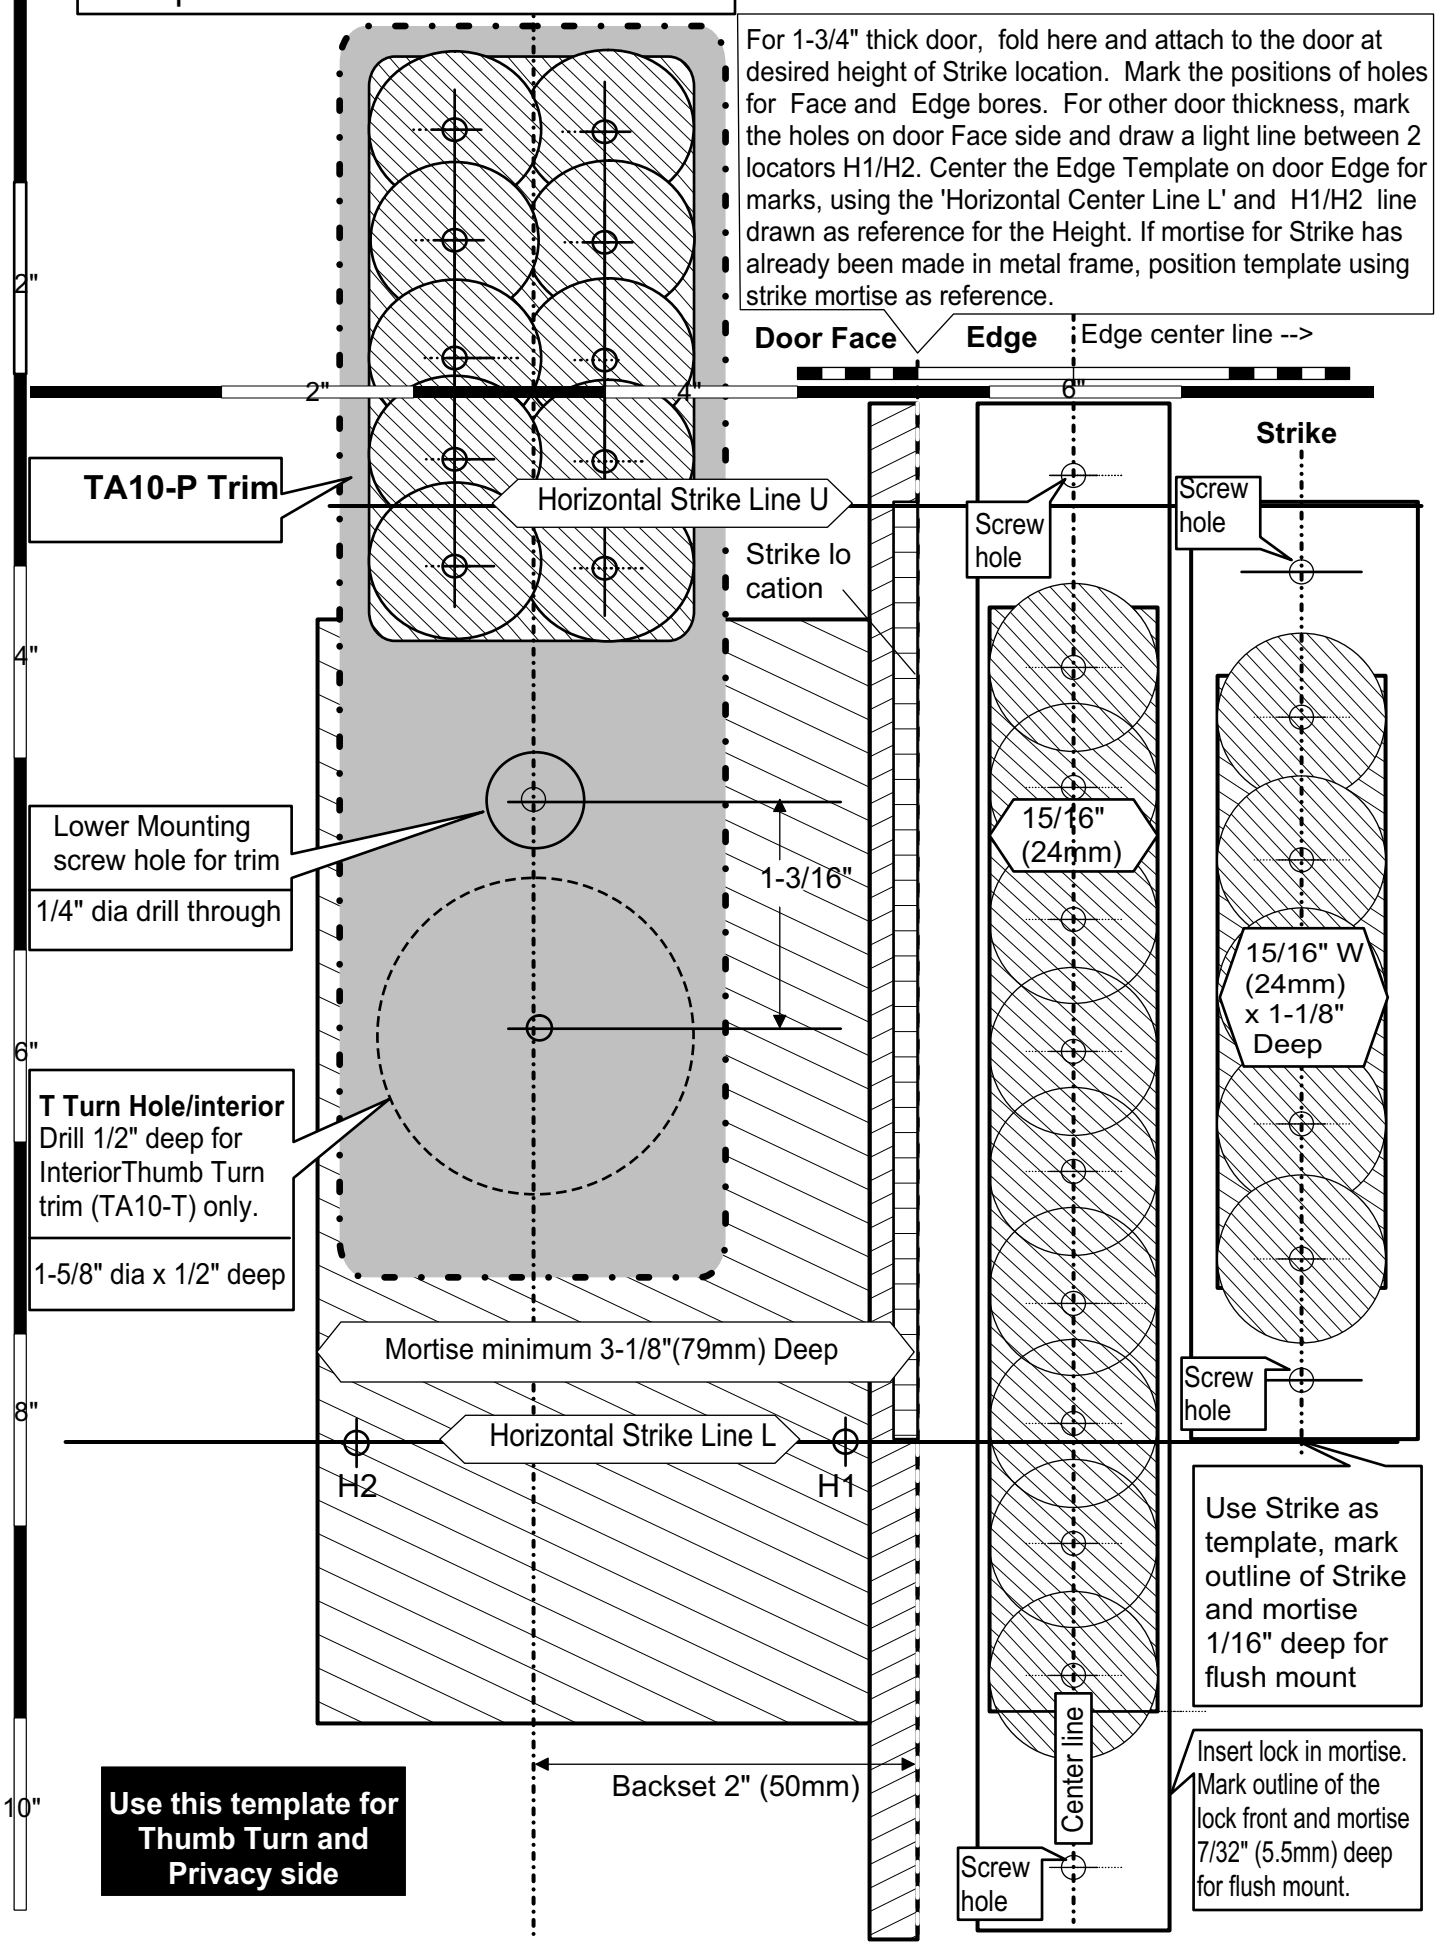


Use this template for Thumb Turn and Privacy side

Use Strike as template, mark outline of Strike and mortise 1/16" deep for flush mount

Insert lock in mortise. Mark outline of the lock front and mortise 7/32" (5.5mm) deep for flush mount.

Template No. A578PT-tp for A578 Pocket lock case with TA10P, TA10T Trim

For 1-3/4" thick door, fold here and attach to the door at desired height of Strike location. Mark the positions of holes for Face and Edge bores. For other door thickness, mark the holes on door Face side and draw a light line between 2 locators H1/H2. Center the Edge Template on door Edge for marks, using the 'Horizontal Center Line L' and H1/H2 line drawn as reference for the Height. If mortise for Strike has already been made in metal frame, position template using strike mortise as reference.

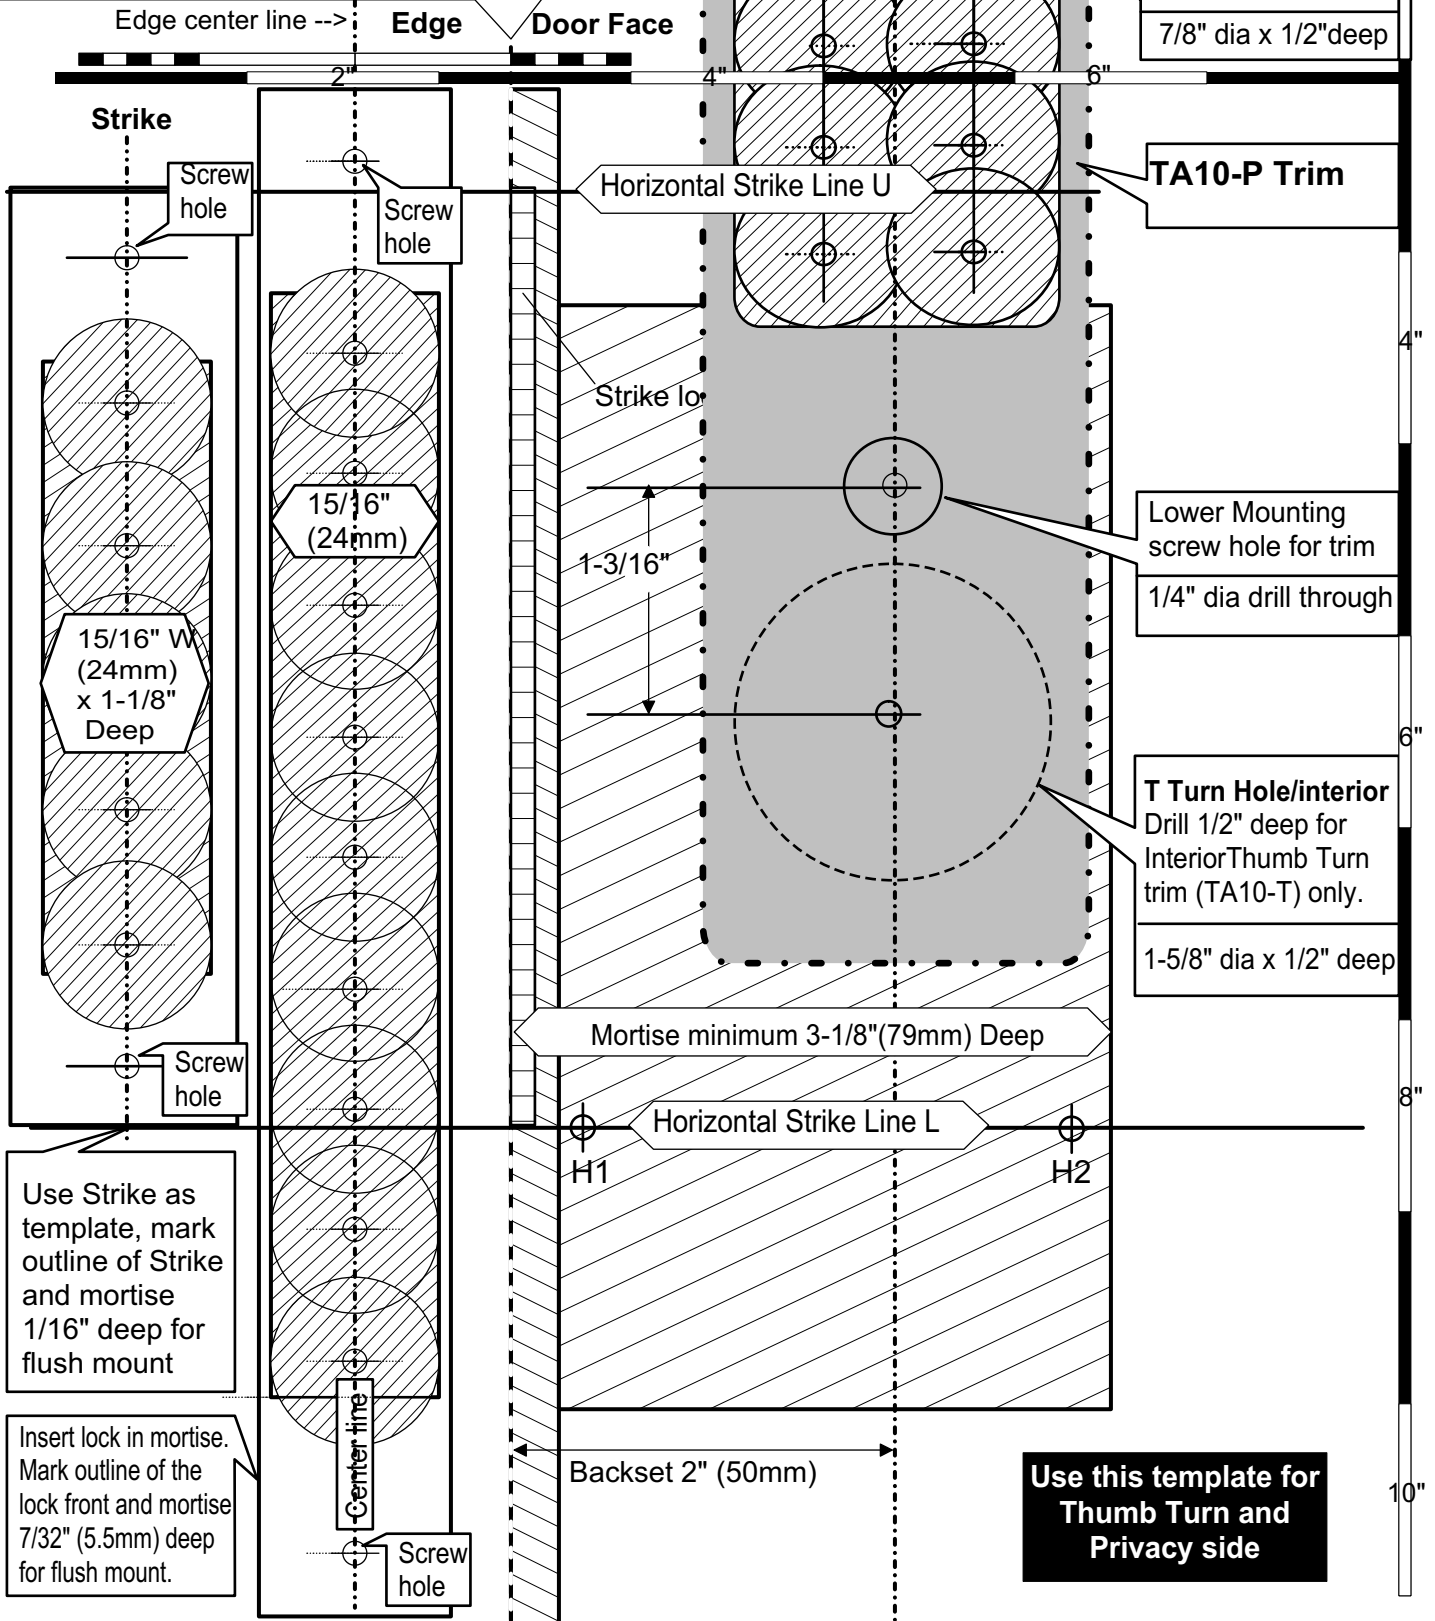

Mortise 1-5/8" W x 3" L x 1/2" Deep for flush mount of the Trim set TA10-PT
7/8" dia x 1/2" deep

TA10-P Trim

Lower Mounting screw hole for trim
1/4" dia drill through

T Turn Hole/interior
Drill 1/2" deep for InteriorThumb Turn trim (TA10-T) only.
1-5/8" dia x 1/2" deep

Use Strike as template, mark outline of Strike and mortise 1/16" deep for flush mount

Insert lock in mortise. Mark outline of the lock front and mortise 7/32" (5.5mm) deep for flush mount.

Use this template for Thumb Turn and Privacy side

