


Installation Template For LT595 KS,KV (5" backset)

Door thickness
Door edge Door face

1-3/4"
2"
Fold on dotted line and attach to the door at desire height. Mark the position of necessary holes for Face and Edge bores.

STRIKE TEMPLATE

LATCH TEMPLATE

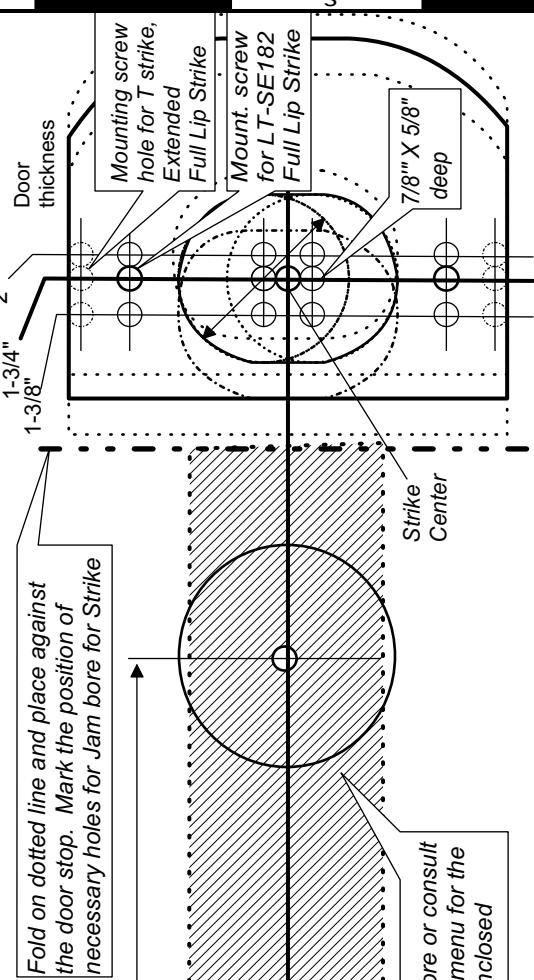

Installation Template For LT595 KS,KV (5" backset)

STRIKE TEMPLATE

LATCH TEMPLATE

