


Template for D530LL

For 1-3/4" thick door, fold here, attached to the door at desire height. Mark the position of necessary holes for Face bore and Edge bore.

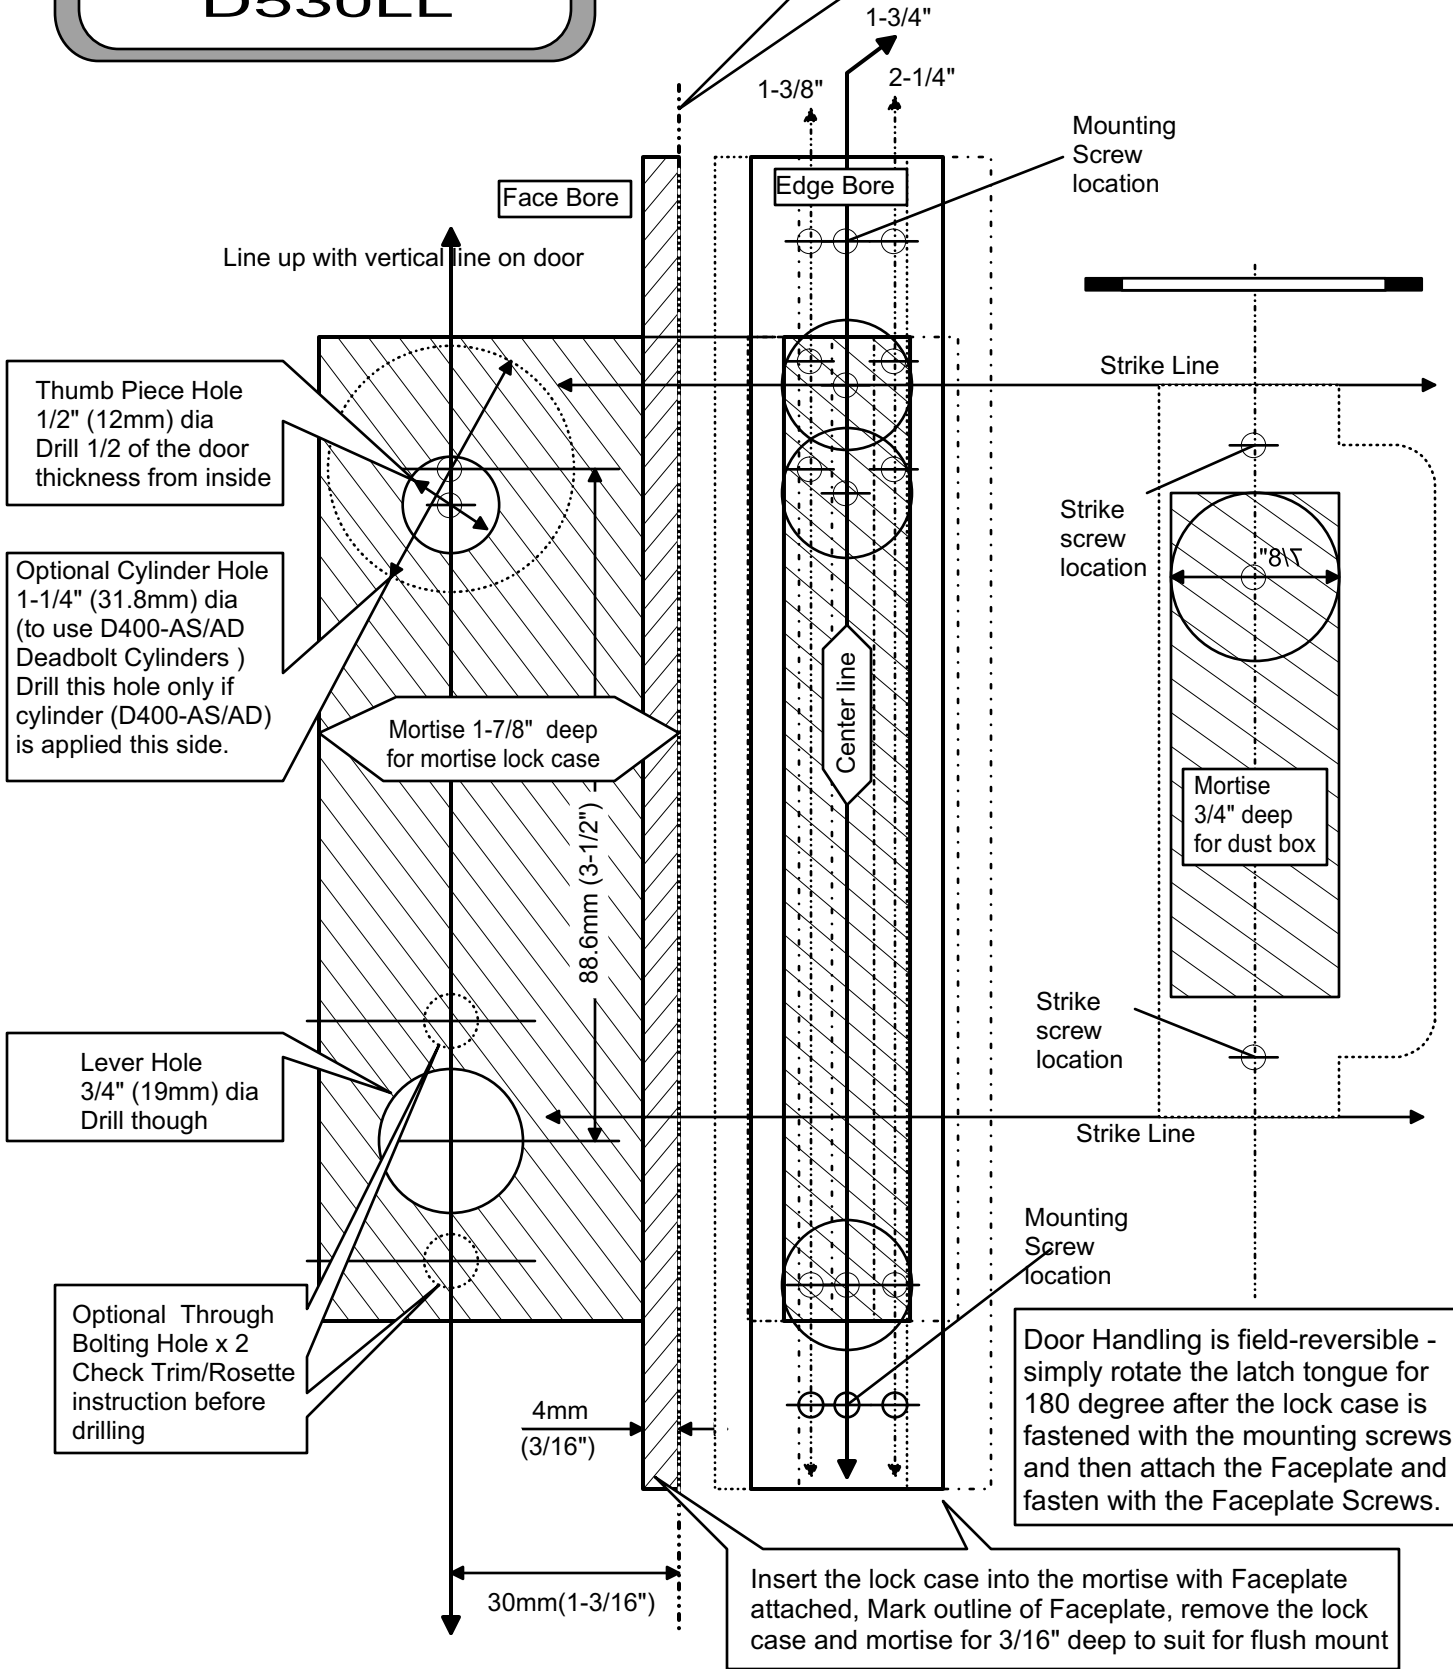


Door Handling is field-reversible - simply rotate the latch tongue for 180 degree after the lock case is fastened with the mounting screws; and then attach the Faceplate and fasten with the Faceplate Screws.

Insert the lock case into the mortise with Faceplate attached, Mark outline of Faceplate, remove the lock case and mortise for 3/16" deep to suit for flush mount

For 1-3/4" thick door, fold here, attached to the door at desire height. Mark the position of necessary holes for Face bore and Edge bore.

Template for D530LL

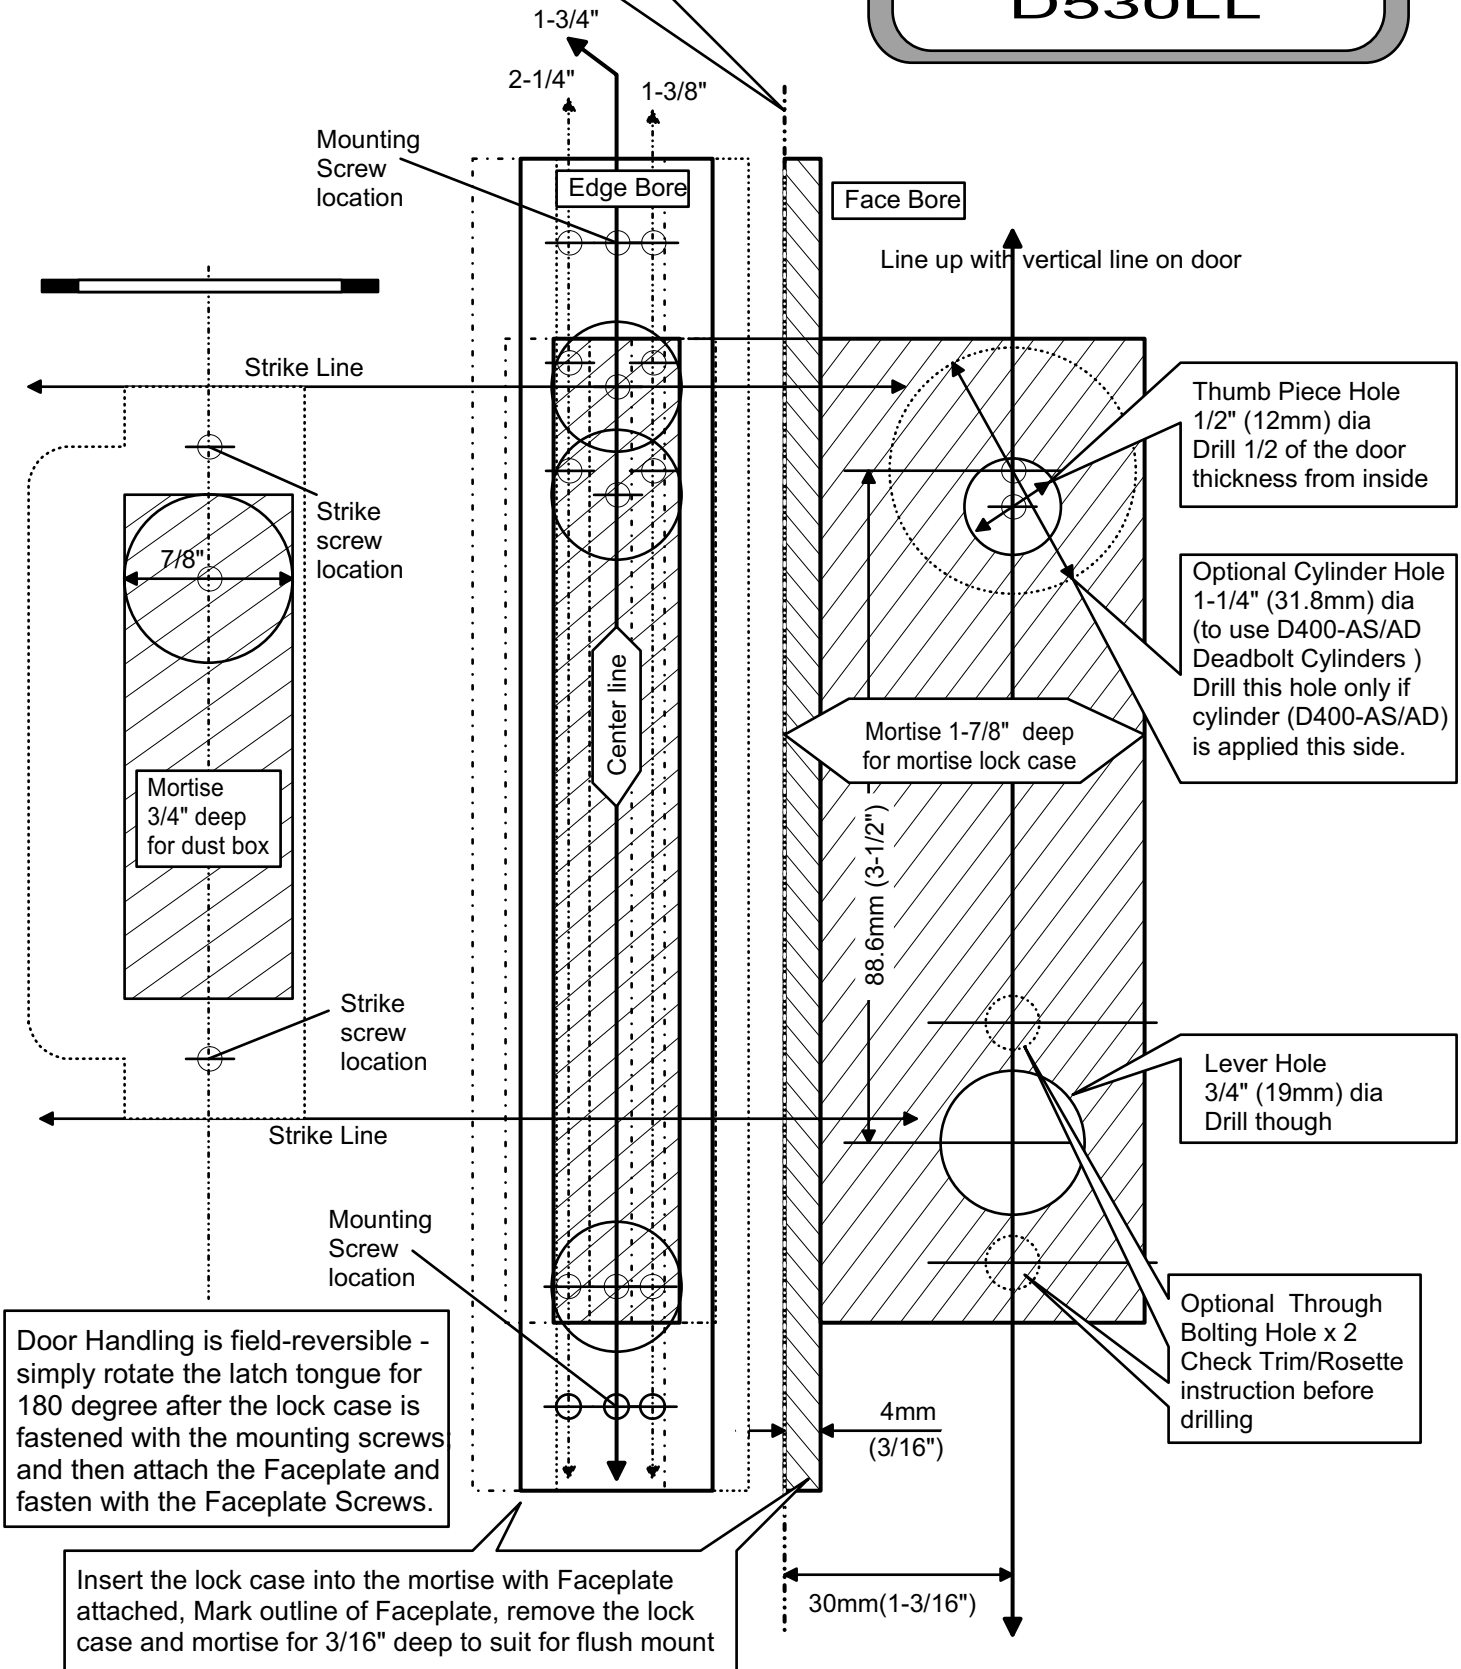

Thumb Piece Hole
1/2" (12mm) dia
Drill 1/2 of the door
thickness from inside

Optional Cylinder Hole
1-1/4" (31.8mm) dia
(to use D400-AS/AD
Deadbolt Cylinders)
Drill this hole only if
cylinder (D400-AS/AD)
is applied this side.

Lever Hole
3/4" (19mm) dia
Drill though

Optional Through
Bolting Hole x 2
Check Trim/Rosette
instruction before
drilling

Door Handling is field-reversible -
simply rotate the latch tongue for
180 degree after the lock case is
fastened with the mounting screws
and then attach the Faceplate and
fasten with the Faceplate Screws.

Insert the lock case into the mortise with Faceplate
attached, Mark outline of Faceplate, remove the lock
case and mortise for 3/16" deep to suit for flush mount